

PRE-FILTER FITTING INSTRUCTIONS

MAZDA BT-50 3.0L & Ford Ranger 3.0L


IMPORTANT – BEFORE STARTING

- Ensure the engine bay is clean and free from contaminants.
- The Fuel Manager unit has arrows which indicate flow located under the ports.
- Install all fittings and plugs into the filter assembly using a suitable thread paste such as Threebond1110B. DO NOT use thread tape as this can lead to air leaks.



KIT CONTENTS

1. Fuel Manager 30 micron Filtration Unit
2. Mounting Bolts, Washers and Nuts
4. Fuel Hose 1m 3/8 Inch
5. Drivetech 4x4 Filter Bracket
6. Straight Barb Fittings 3/8 Inch
7. Blanking Plugs
8. Hose Clamps

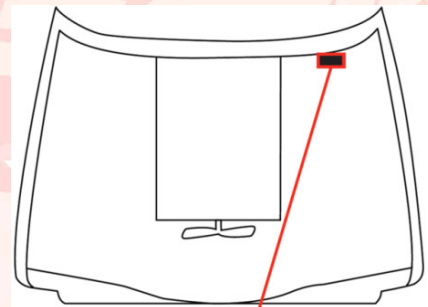

FUELMANAGER[®]

FITTING INSTRUCTIONS

1. Remove inlet hose from original filter.
2. Remove the two (2) retaining nuts on top of the factory filter.
3. Install the Drivetech 4x4 bracket on top of the original filter housing and refit the retaining nuts.
4. Install all fittings and plugs into the filter assembly using suitable thread paste sealant such as Threebond 1110B.
5. Mount Fuel Manager filter assembly on to the bracket.
6. Connect the inlet side of the final original filter to the outlet of the Fuel Manager filter.
7. Fit the supply fuel line to the inlet of the Fuel Manager.
8. Reconnect outlet pipe of the factory filter to the inlet of the common rail supply pump.
9. Ensure all fuel lines are suitably secured.
10. Prime the system using the hand primer on the factory filter. When the primer goes firm, the engine is ready to start.